

MAX-UNI-L-8-2-10-W-W

160W Integrated X-Ray Source

| TruFocus Ordered P/N | Min. Voltage (-kV) | Max. Voltage (-kV) | Max. Current (mA) | Max. Power (W) | Focal Spot Size (mm) | Target Angle (°) | Flux Stability (% RSD) | Target Material | Beam Angle | Cooling Method | Programmable |
|----------------------|--------------------|--------------------|-------------------|----------------|----------------------|------------------|------------------------|-----------------|----------------|----------------|--------------|
| MAX-UNI-L-8-2-10-W-W | 17 | 80 | 2 | 160 | 0.2 | 10° | 0.01 | Tungsten (W) | X=30° Y=20° | Water | Y |

*0.01% RSD is typical value and is based on data collected over 48 hour period of continuous operation tested at TruFocus test station
For industrial environment and applications that demand top quality and high stability



Front View



Rear View

MAX-UNI-L-8-2-10-W-W is an Integrated (UNI-Block™) X-Ray Source (160W, 80kV, 2mA). It is part of TruFocus' MAX-UNI product family and integrates TruFocus' high quality X-Ray source, an extremely stable power supply with a programmable interface in a fully shielded housing.

HIGHLIGHTS

Control Interface: Fully programmable control interface (rear D-Sub 25 pin connector)

Fault Detection & Monitor: Temperature, InterLock, Cooling Flow

Focal Spot Size: 0.2 mm, nominal

Stability: 0.01% Relative Standard Deviation (average) over a 48 hour period of continual operation

APPLICATIONS

- Analytical • Stress Analysis •**
- Thickness Gauging • Particle Analysis •**
- Spectroscopy Soft X-Ray • Radiology •**
- Isotope Replacement • Fluorescence •**
- Densitometry**

MAX-UNI-L-8-2-10-W-W controlled with MAX CONTROLLER or PC/MAX Driver (USB)

Controller with Color LCD • Graphic User Interface • PC USB Interface • PC Software Driver with advanced control & detection functions • Fiber Optics/USB Interfacing for Noise Free Communication



MAX Series Controller (MAX Controller)



Front Panel Control Mode
Use MAX Series Controller to control MAX-UNI-L-8-2-10-W-W



PC Control Mode
Use a PC & MAX Controller to control MAX-UNI-L-8-2-10-W-W

HIGHLIGHTS

- Programmable kV input • Programmable mA input
- Fault Detection & Monitoring
- HV Monitor output • mA Monitor output • Calibration output • Interlock Status input • System Fault detection • Pressure Fault Detection • Tube Over-Power Fault Detection • Tube Over-Power Monitor output kV input • Programmable mA input.

OTHER APPLICATIONS

- Tests of X-Ray backup units
- Incoming Tests of new units
- Cycle Test

- Simple to set up
- Safe & time saving
- Minimum space

Specifications

MAX-UNI-L-8-2-10-W-W

Control & Calibration Interface (25-pin D-Sub Connector)

| PIN# | PARAMETER | MIN | MAX |
|--------------------------------------|-----------------------------------|----------|----------|
| 2 | +10 VDC Reference Output | +9.95 | +10.05 |
| 3 | kV Program Input, full scale | 0 | +10 VDC |
| 4,6 | kV mA Program Return, floating | -2 VDC | +2 VDC |
| 5 | mA Program Input, full scale | 0 | +10 VDC |
| 7 | kV Monitor Output, full scale | 0 | +10 VDC |
| 8 | mA Monitor Output, full scale | 0 | +10 VDC |
| | HV Monitor Accuracy | | 2% |
| | mA Monitor Accuracy | | 2% |
| 9 | Monitor Return | 0 | 0 |
| Control & Fault Detection | | | |
| 1, 14 | Ground and Logic Return | 0 | 0 |
| 15 | Enable Input low level interlock | +3.5 VDC | +36 VDC |
| 16 | Fault Output | +4.5 VDC | +5.5 VDC |
| 17 | Pressure Fault | 200 Kpa | 500 Kpa |
| 18 | Temperature Fault | 0 C | 65 C |
| | Over Voltage Tube Fault | -80 kV | -84kV |
| | Over Current Tube Fault | 2.0 mA | 2.5 mA |
| 19 | Over Power Tube Fault | 160W | 210 W |
| 20 | Ready Output | +4.5 VDC | +5.5 VDC |
| 21 | Tube Power Monitor, full scale | | +2 VDC |
| Power Inputs | | | |
| 10 | + VDC input for filament: Voltage | 22 VDC | 32 VDC |
| | + VDC input for filament: Current | 0.2 AMP | 0.8 A |
| 11,12,13 | + VDC Input for HV: Voltage | 24 VDC | 32 VDC |
| | + VDC input for HV: Current | 0 AMP | 11 A |
| | + VDC input for HV: Power | 0 WATT | 250 W |
| 23,24,25 | - VDC input supply returns | 0 | 0 |
| | Fusing on power inputs | | 18 A |

System Parameters

| Parameter | Value | Unit |
|-----------------|-------------|--------|
| Target Voltage | -17 to -80 | kV |
| Target Current | 0-2.0 | mA |
| Maximum Power | 160 | W |
| Focal Spot Size | 0.2 nominal | mm |
| Beam Angle | X=30° Y=25° | degree |
| Operation | Continuous | — |


X-Ray Tube

| Parameter | Description |
|-------------------------------------|-----------------------------------|
| X-ray Tube | Glass/ Metal |
| Filament | 3 V at 3.5 mA (max) |
| Target Material | Tungsten |
| Target Angle | 10° |
| Window Material | Beryllium |
| Window Thickness | .005 " |
| Window Type | Side Window |
| Operating / Storage Temp. (Max.) | +10 °C to +60 °C / 0 °C to +60 °C |
| Operating / Storage Humidity (Max.) | 85 % RH |
| Cooling Method | Water + 10% Propylene Glycol |
| Weight | 14 lbs |
| Flux Stability | 0.01% |

Flux Stability: 0.01% RSD is typical value and is based on data collected over 48 hour period of continuous operation tested at TruFocus test station

OUTLINE DRAWING

| | |
|---------------------|-----------------------------|
| Drawing# & Version: | DW-MAX-UNI-L-8-2-10-W-W-V01 |
| TruFocus P/N: | MAX-UNI-L-8-2-10-W-W |
| Unit: | Inch |

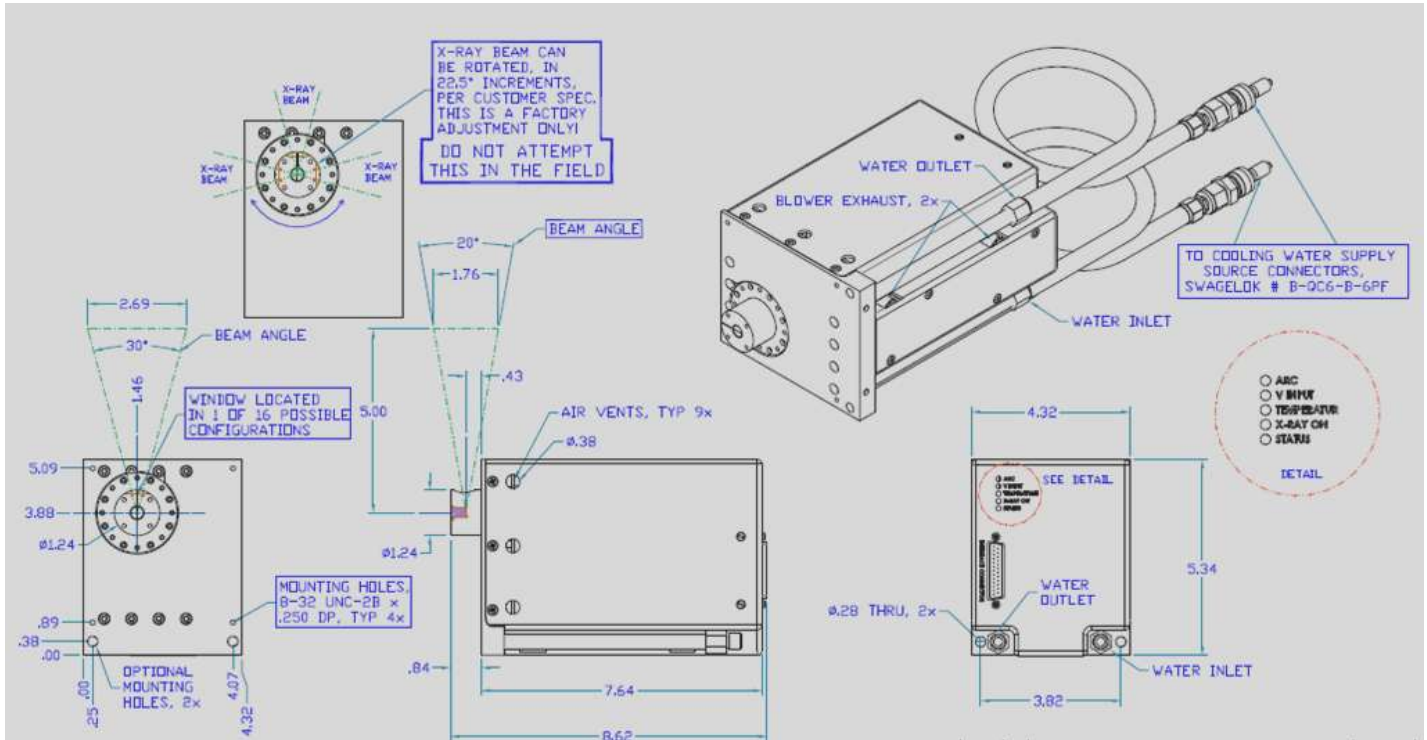

Standard Window Orientation



Caution

X-Ray Radiation



1. X-Ray radiation is harmful to the human body. It is necessary to take all safety precautions when operating this device.
2. The x-ray tube should be installed in an x-ray shielded cabinet to avoid exposure. It is recommended that the safety interlock system be used at all times.
3. It is the customer's responsibility to provide shielding for the use of this device.

Warranty Information

This x-ray tube is warranted to be free of defects in materials and workmanship for a period of 365 days (1 year). This warranty is limited to repair or replacement of defective products only. This warranty replacement cost to customer shall be prorated over the duration of the warranty period. The warranty period commences on the date of installation, but no later than 30 days from the date of shipment from TruFocus to the customer. Any loss, damage, failure and/or malfunction relating in any way to accident, abuse, alteration, misuse, neglect, fitting, disassembly, attempted repair, storage, adjustments of the electronics, or failure to use the tube within the specifications or operating instructions provided by TruFocus, or the lack of proper routine maintenance and care of the tube or system in which it is installed are expressly denied coverage under this warranty.

Subject to local and technical requirements and regulations. Availability of product in this promotional material may vary. Please consult with our office staff for availability.

Information furnished by TruFocus is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. Patent rights are granted to any and all of the circuits described herein. © 2013 TruFocus Corporation